

RASPORED SASTAVLJANJA

1 STEZNI VIJAK

Pritegnite stezne vijke (a) u bočne stranice drvenih nogu.

2 SPAJANJE VEZNE PLOČE

Postavite veznu ploču između drvenih nogu.

3 EKSCENTRIČNA SPOJKA

Umetnite spojke (b) u rupe na veznoj ploči te ih zategnite pomoću odvijača.

4 STEZNI VIJAK

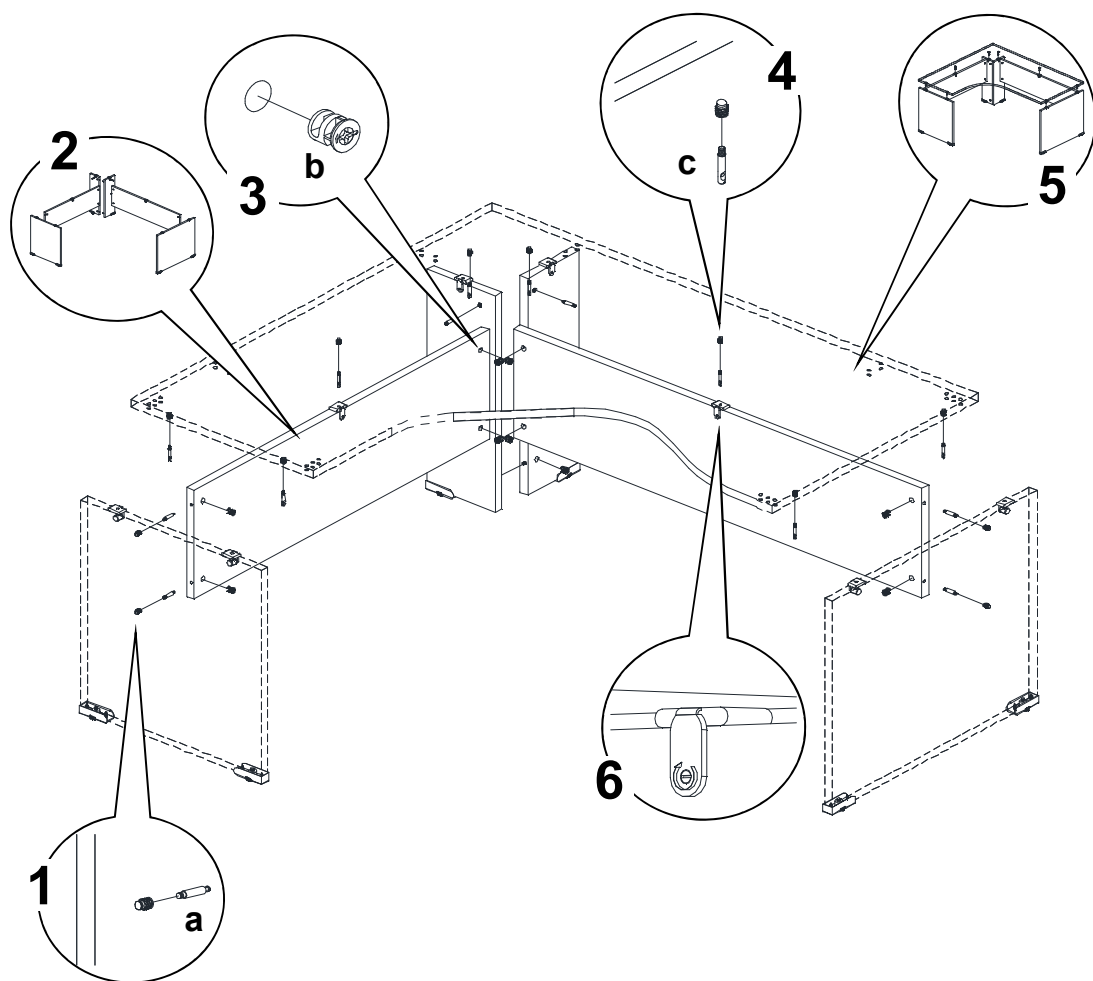
Pritegnite stezne vijke (c) u radnu ploču.

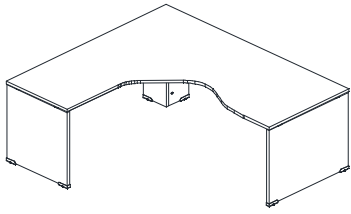
5 RADNA PLOČA

Spustite radnu ploču stola na postavljeni donji dio.

6 SPAJANJE RADNE PLOČE



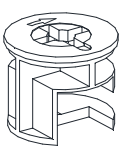



Odvijačem pritegnite vijak na gornjem odstojniku.



SKICA	OPIS ARTIKLA	BROJ KUTIJA	UKUPNI VOLUMEN	UKUPNA TEŽINA
	ZAobljeni Radni Stol s Odstojnicima dim: 180x160x74h cm	2 kom	0,0_ m ³	_ ,0 kg

MONTAŽNI MATERIJAL

ALAT POTREBAN ZA MONTAŽU

Količina	9 kom	9 kom	8 kom		Križni odvijač 2	Ravni odvijač
Opis	Stezni vijak	Ekscentrična spojka	Stezni vijak gornjeg odstojnika			
Skica						
Oznaka	a	b	c		